


# Installation Instructions for P-008

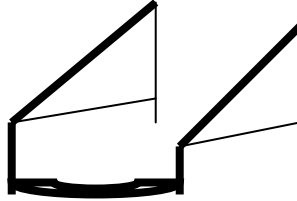

## Parts Included:

- Glass Counsel Top
- Wall Mount Brackets
- Waste Trap Cover

## STEPS TO INSTALL

1. Mount Wall Brackets Approx. 23 1/8" On Center.
2. Mount top to wall, usually approx. 34" from the floor, or at height of your choice. Make Plumb & Level.
3. Carefully mount glass counter top & bowl making sure glass over hang is equal on both sides. Make plumb & Level.
4. Mount faucet and trap assembly (Not provided)
5. Install waste cover.

**Please Note:** console should be attached to wall using appropriate fasteners. If sheet rock over stud construction console should be affixed to the studs.