


Installation Instructions for P-016

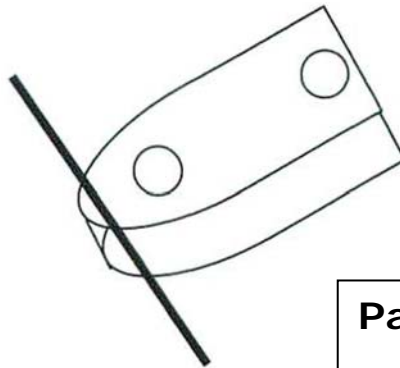

Parts Included:

- Wall Mounting Bracket
- Mounting Ring
- Straight Towel Bar
- Hollow Wall Bolt Kit

STEPS TO INSTALL

1. Mount wall support to the wall using secure carriage bolts.
2. Make sure P-016 is secure, level and plumb. Allow room for the mounting ring and the depth of the bowl. The Top of the wall should be approx. 30 inches from floor if you want the top of the sink to be 36 inches.
3. Mount towel bar. (Slide in side be careful not to scratch bar and lock screw into place).
4. After pedestal is assembled, install faucet, trap assembly (Not provided)

Please Note: Wall Bracket should be attached to wall using appropriate fasteners. If sheet rock is over stud construction then the wall bracket should be affixed to the studs or a 2" by 6" supported between the wall studs.